


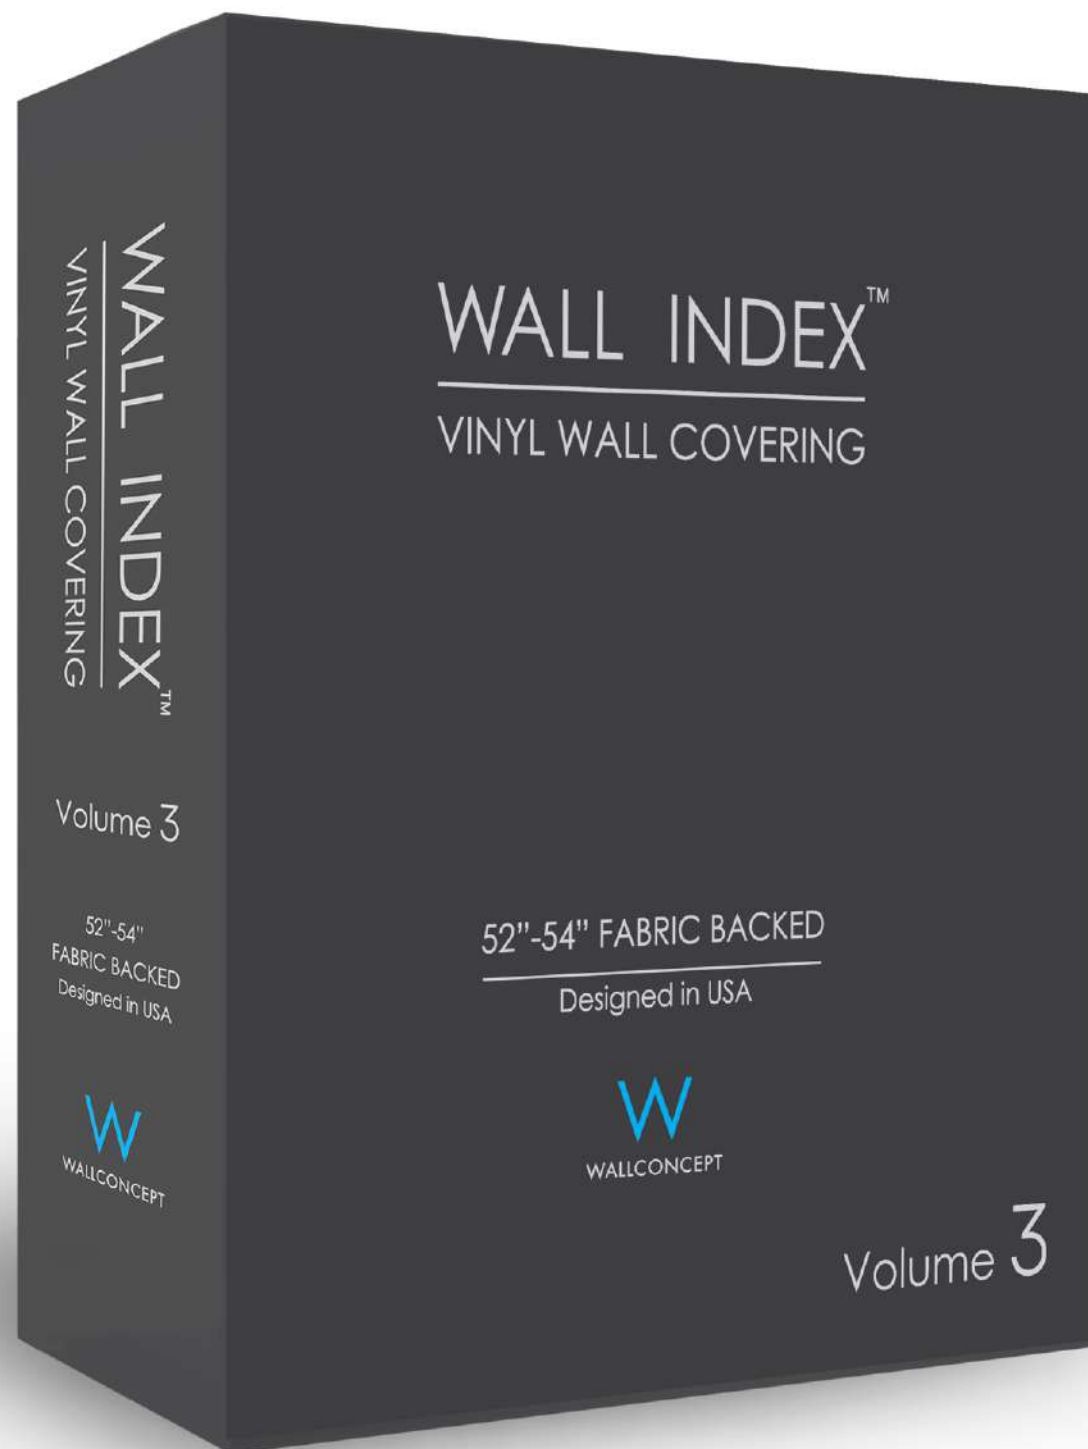

WALL INDEX™
VINYL WALL COVERING

WALL INDEX™
VINYL WALL COVERING

Volume 3

52"-54"
FABRIC BACKED
Designed in USA



52"-54" FABRIC BACKED
Designed in USA




Volume 3

Vinyl wallcovering is a reliable and durable solution for modern interior spaces, especially in areas with regular use such as hotels, healthcare facilities, and corporate and residential environments. Its protective coated surface helps resist moisture, stains, scuffs, and everyday wear, ensuring walls maintain a clean and well-finished appearance over time.

In addition to durability, vinyl wallcovering also supports smooth and efficient project execution. Wider roll formats allow for better surface coverage with fewer joints, resulting in a more seamless and refined finish while also helping to reduce installation time.

With proper surface preparation and careful installation, it delivers a consistent, long-lasting result. Combining practicality with a clean aesthetic, vinyl wallcovering is a suitable choice for both functional and design-focused spaces.

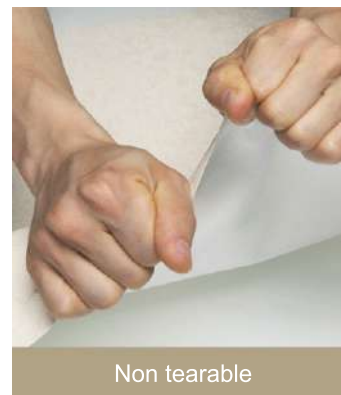


Non tearable




Wear - resistant



Waterproof

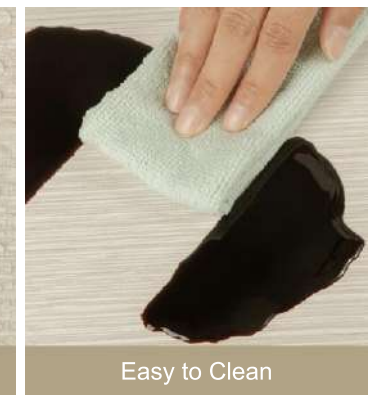

Easy to Clean





WALL INDEX™ VINYL WALL COVERINGS

ZEFFO

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:


Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA

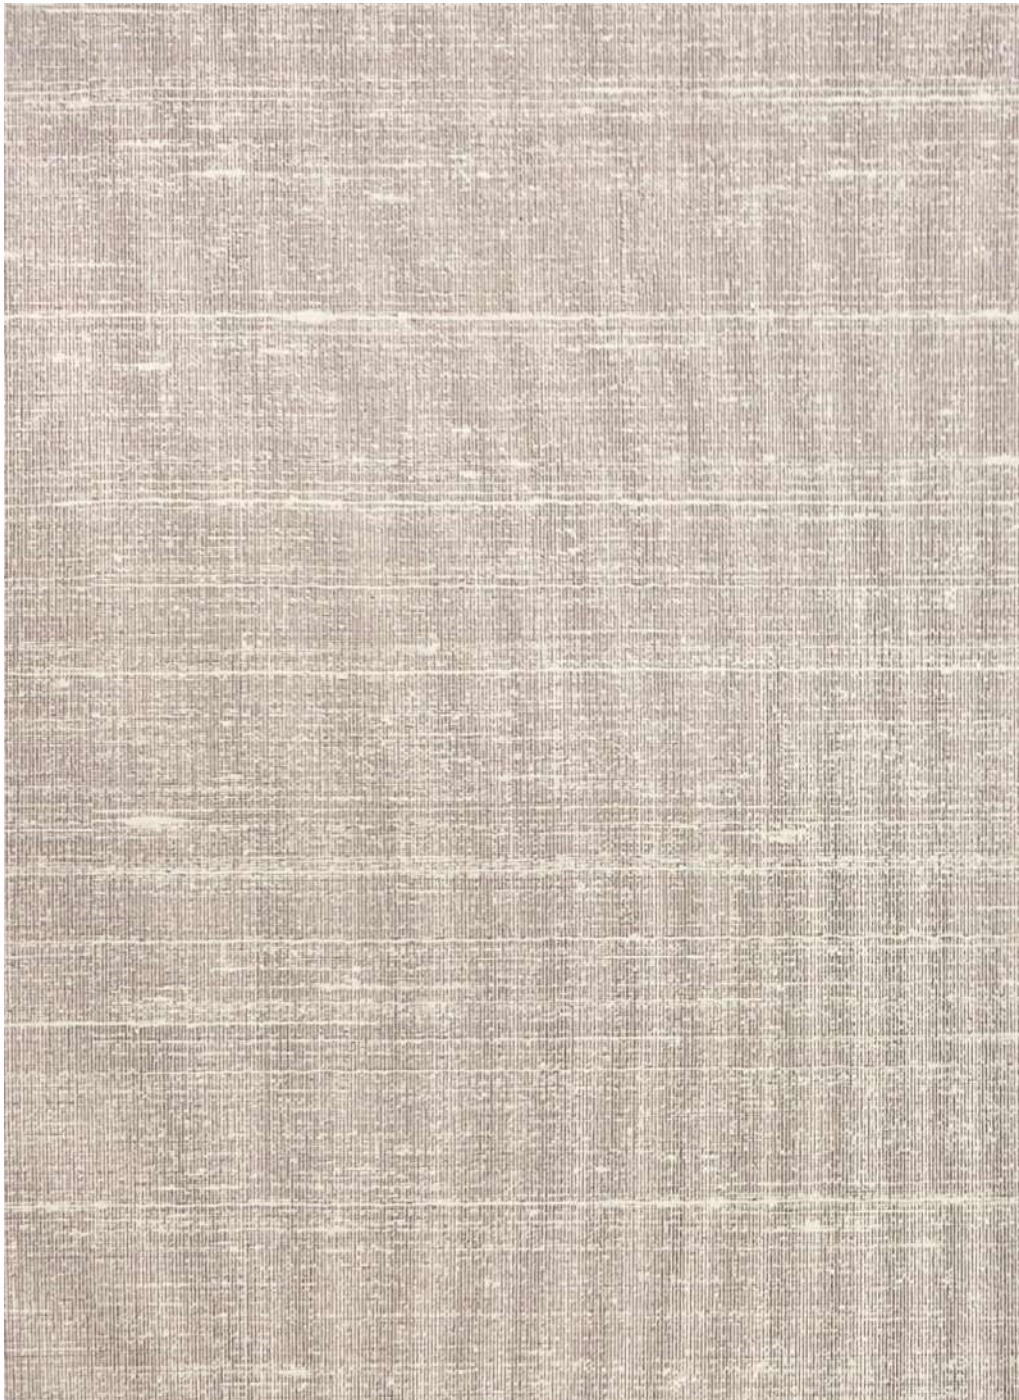

W301-1



W301-2



W301-3



W301-4



W301-5



W301-6



W301-7



W301-8



W301-9



W301-10



W301-11



W301-12



FROSIC



WALL INDEX™ 52" / 54" VINYL WALLCOVERINGS

FROSIC

WALL INDEX™ VINYL WALL COVERINGS

FROSIC

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0 oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA



W302-1



W302-2



W302-3



W302-4



W302-5



W302-6



W302-7



W302-8



W302-9



W302-10



W302-11



W302-12



W302-13



WALL INDEX™ VINYL WALL COVERINGS

KITO

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA



W303-1



W303-2



W303-3



W303-4



W303-5



W303-6



W303-7



W303-8



W303-9



W303-10



W303-11



W303-12



W303-13



WALL INDEX™ VINYL WALL COVERINGS

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.





W304-1



W304-2



W304-3



W304-4



W304-5



W304-6



W304-7



W304-8



W304-9



W304-10



W304-11



W304-12



W304-13



AMARA



WALL INDEX™
52" / 54" VINYL WALLCOVERINGS

AMARA

WALL INDEX™ VINYL WALL COVERINGS

AMARA

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.




Multiple test reports
No toxic volatiles



ISO9001 : 2015
ISO14001 : 2015



Designed in USA

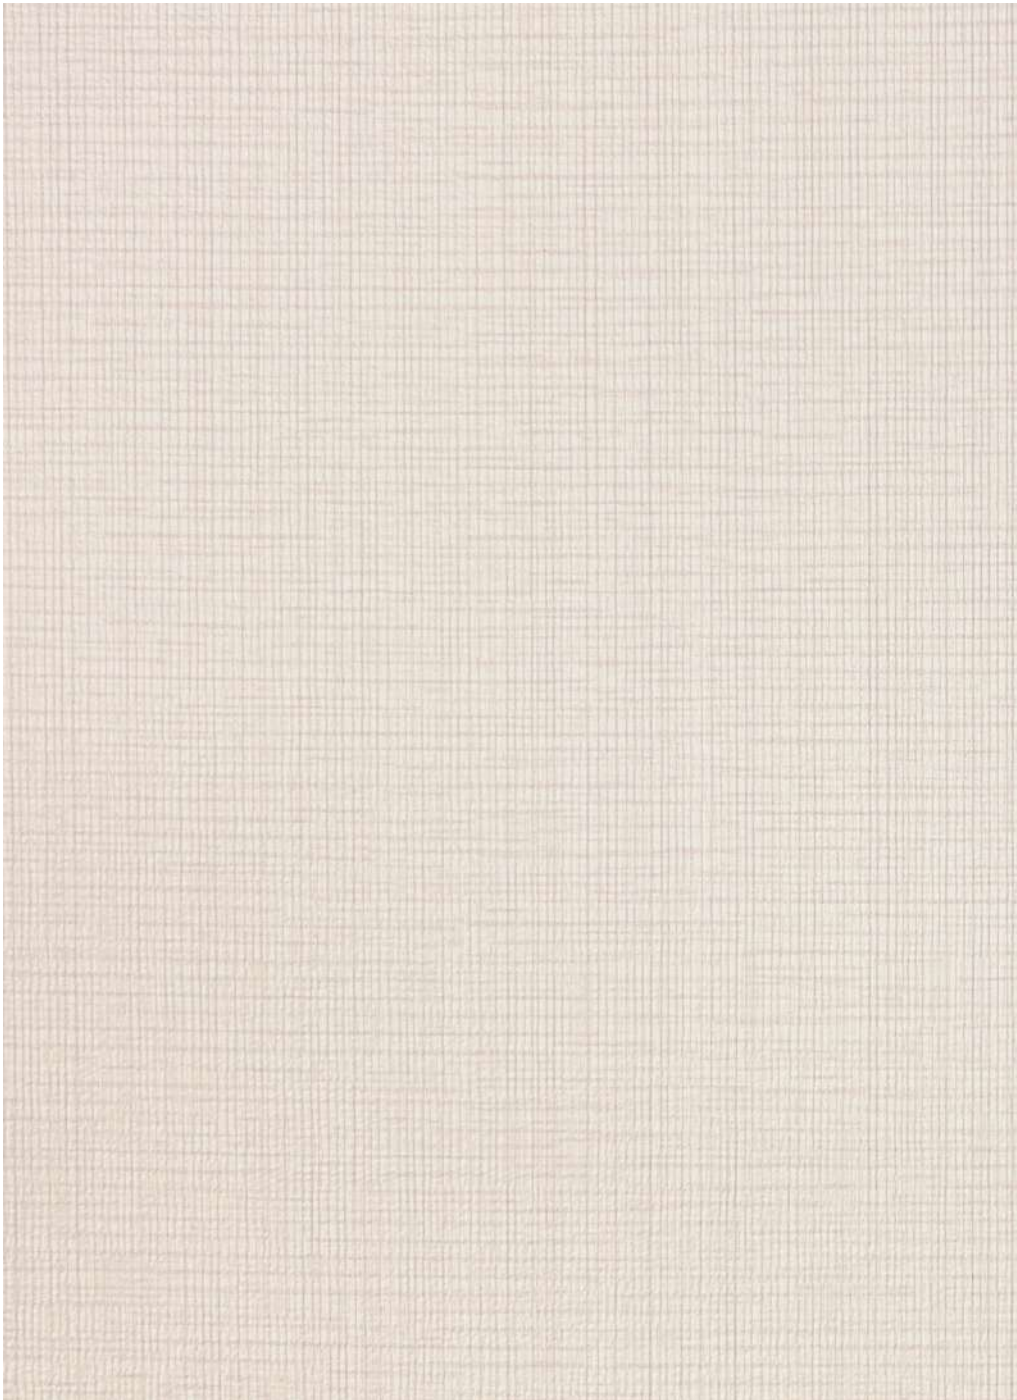

W305-1



W305-2



W305-3




W305-4



W305-5



W305-6

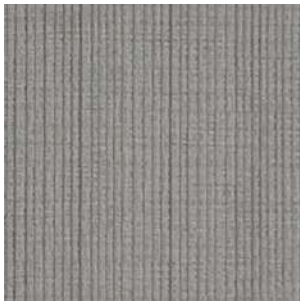

W305-7




W305-8



W305-9



W305-10

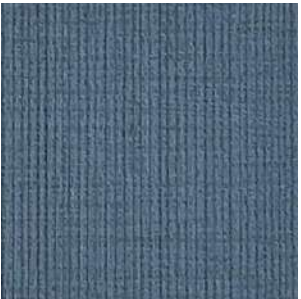

W305-11



W305-12



W305-13

WALL INDEX™
52" / 54" VINYL WALLCOVERINGS

WALL INDEX™ VINYL WALL COVERINGS

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.


Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



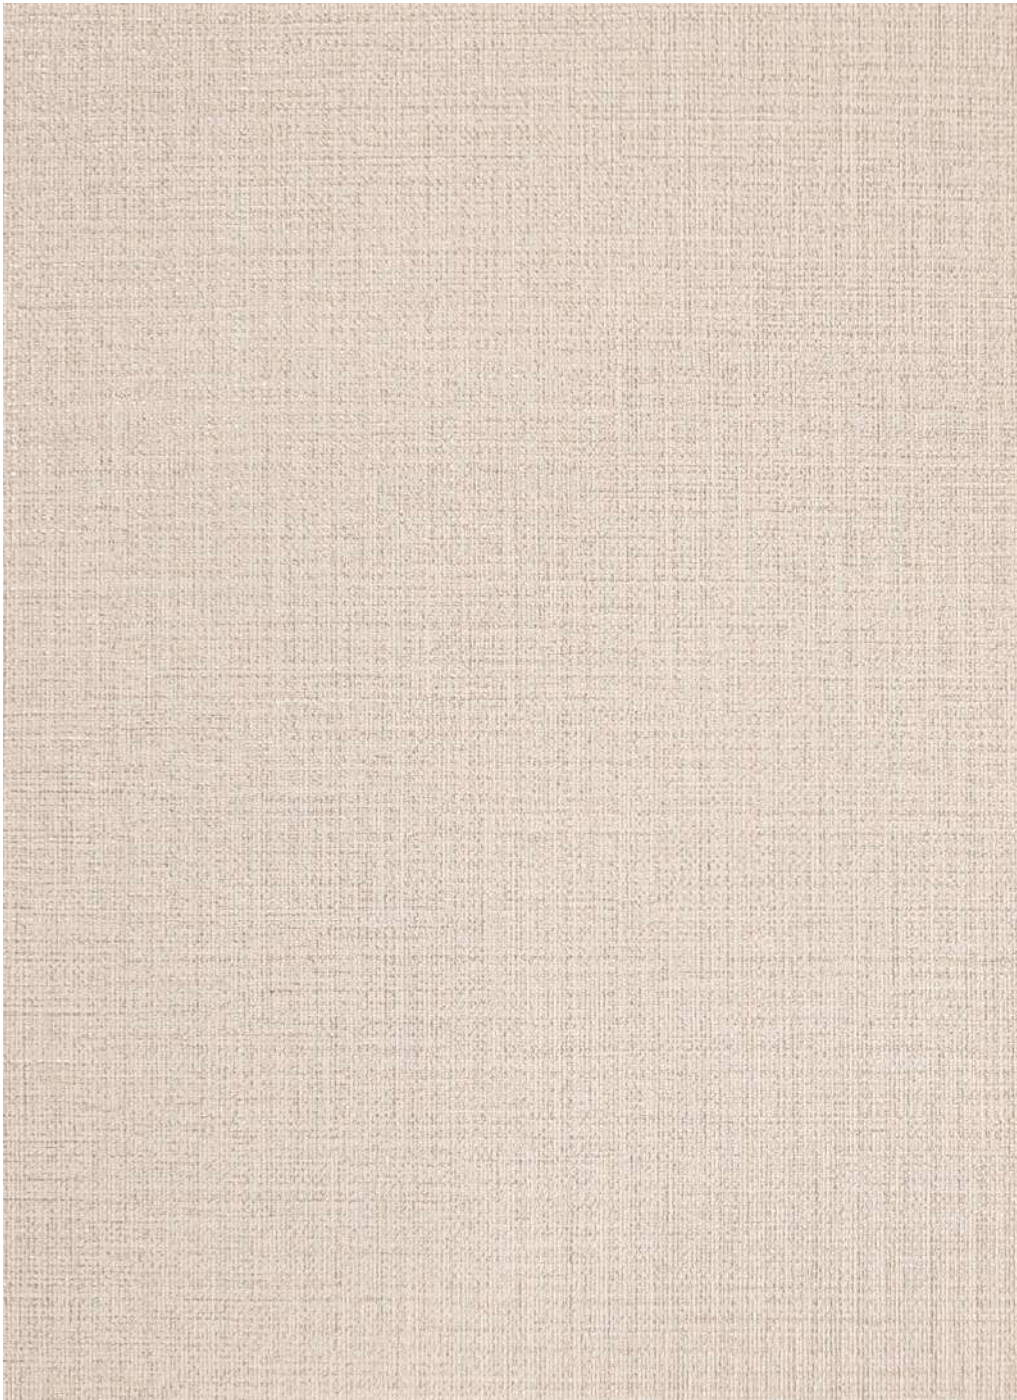

W306-1



W306-2



W306-3



W306-4



W306-5



W306-6



W306-7



W306-8



W306-9



W306-10



W306-11



W306-12



W306-13



WALL INDEX™ VINYL WALL COVERINGS

HUNAX

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated

Fabric Backed Wallcovering

Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA



W307-1

ENVIRONMENTAL WALL COVERING



W307-2




W307-3



W307-4



W307-5

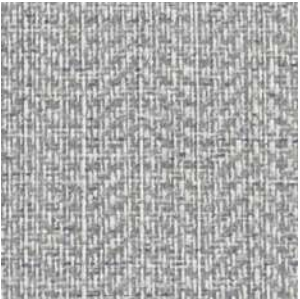

W307-6



W307-7



W307-8



W307-9



W307-10



W307-11



W307-12



RYNER



WALL INDEX™ 52" / 54" VINYL WALLCOVERINGS

RYNER

WALL INDEX™ VINYL WALL COVERINGS

RYNER

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA



W308-1



W308-2



W308-3



W308-4



W308-5



W308-6



W308-7



W308-8



W308-9



W308-10



W308-11



W308-12



W308-13



CORAS



WALL INDEX™
52" / 54" VINYL WALLCOVERINGS

CORAS

WALL INDEX™ VINYL WALL COVERINGS

CORAS

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 20.0.oz./lin.yard - 615 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :


Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Multiple test reports
No toxic volatiles



Designed in USA

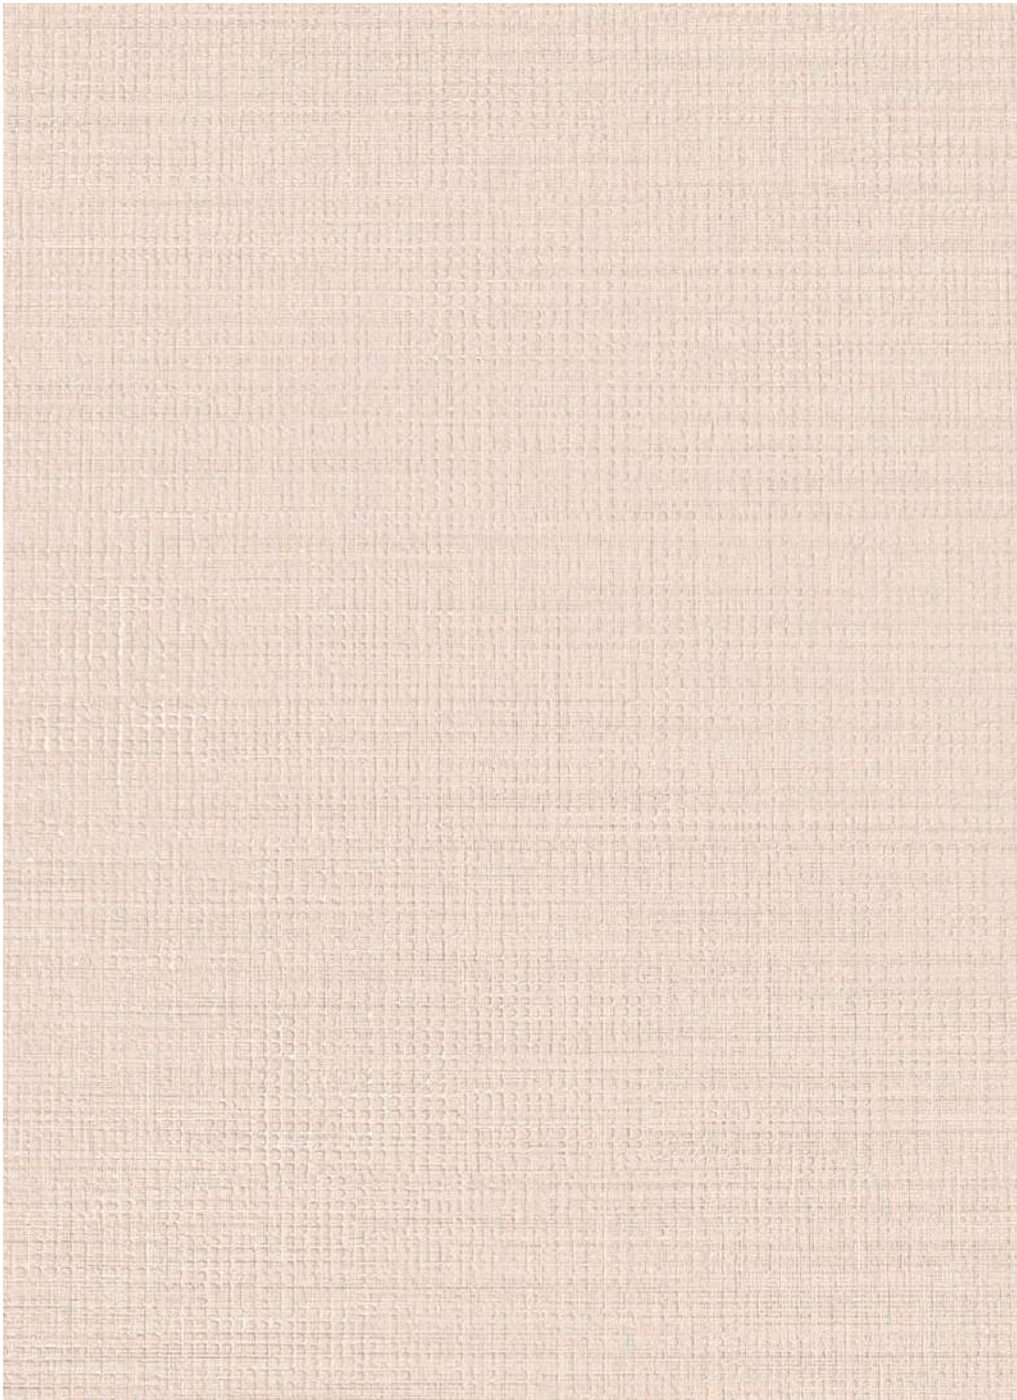

W309-1

ENVIRONMENTAL WALL COVERING



W309-2



W309-3




W309-4



W309-5



W309-6

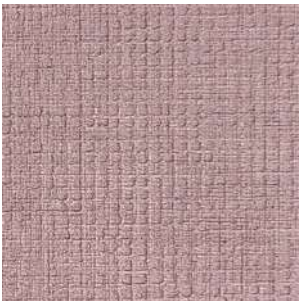

W309-7



W309-8



W309-9



W309-10



W309-11



W309-12



W309-13



HOBAL



WALL INDEX™ 52" / 54" VINYL WALLCOVERINGS

HOBAL

WALL INDEX™ VINYL WALL COVERINGS

HOBAL

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:


Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA

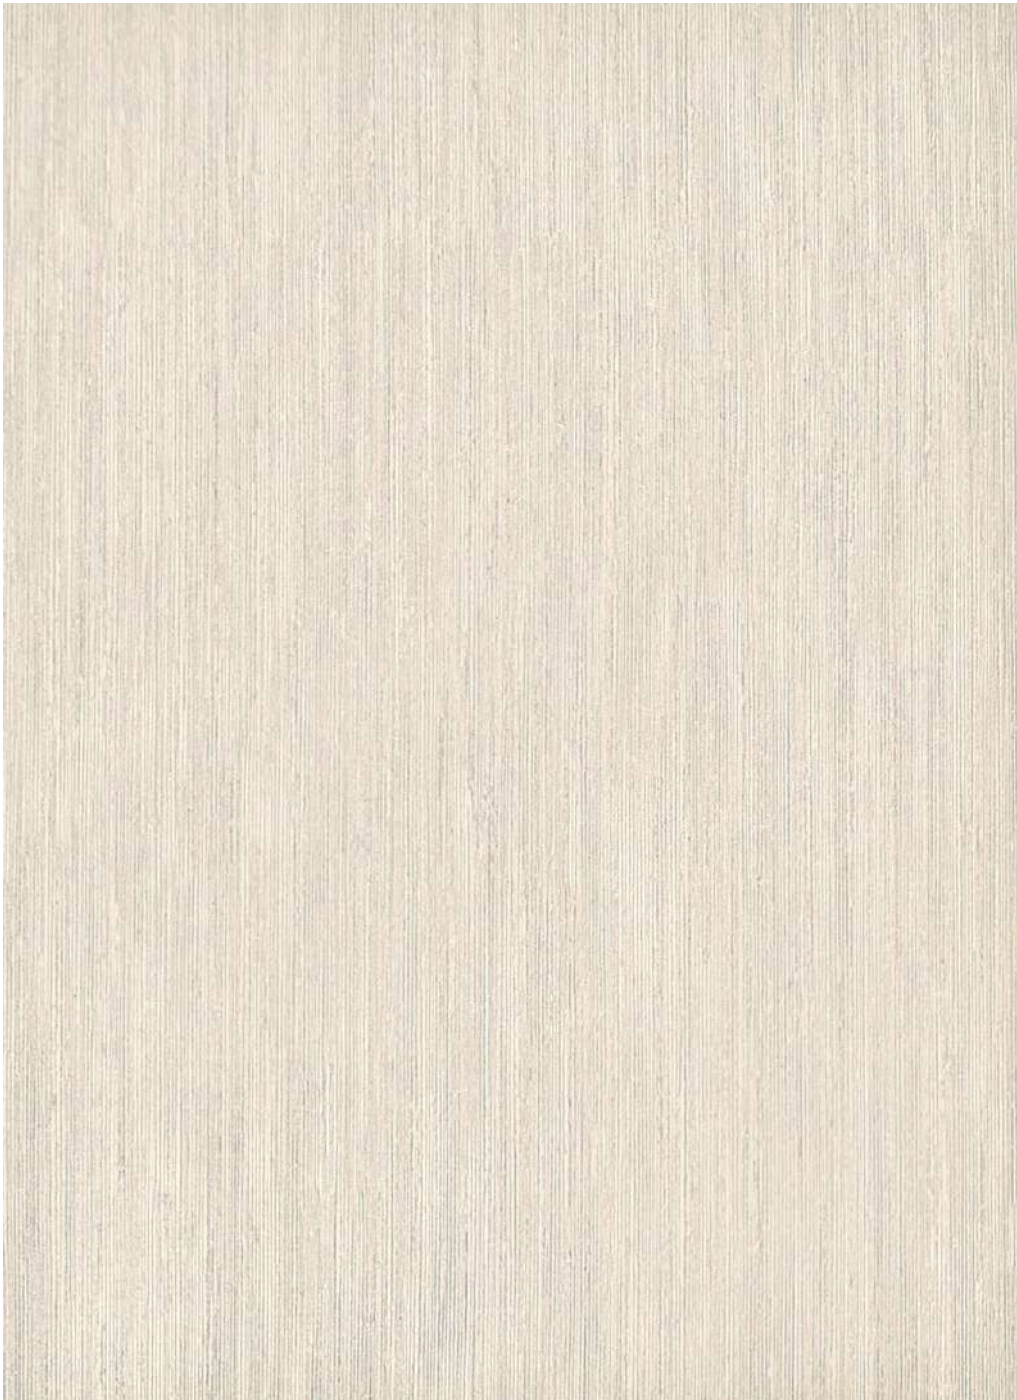

W310-1



W310-2



W310-3



W310-4



W310-5



W310-6



W310-7



W310-8



W310-9



W310-10



W310-11



W310-12



W310-13



WALL INDEX™ VINYL WALL COVERINGS

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 20.0 oz./lin.yard - 615 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.


Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



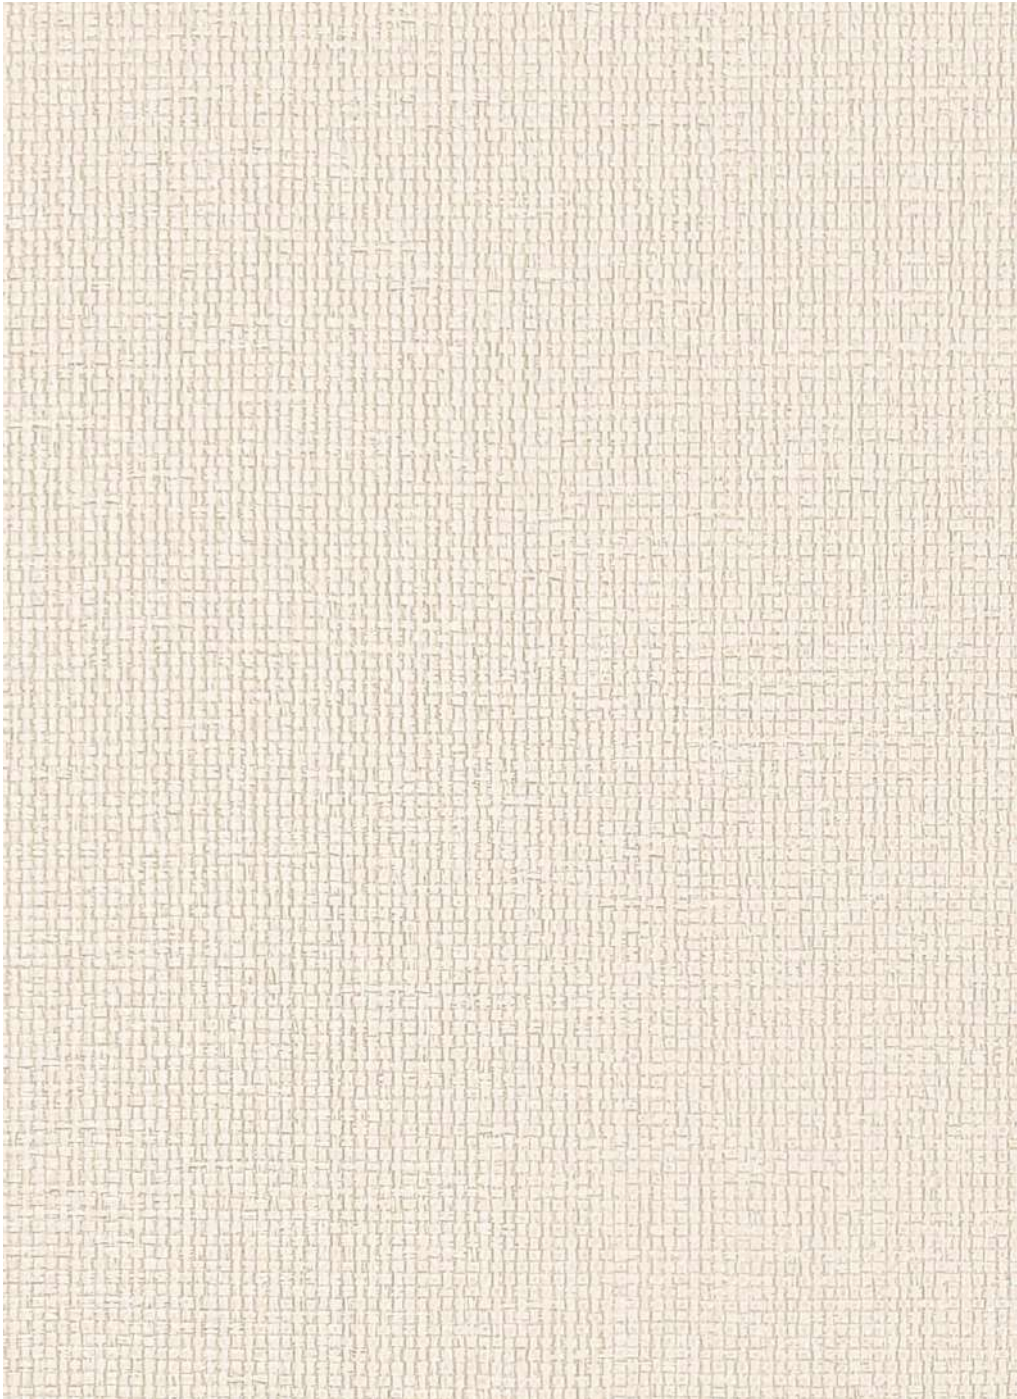

W311-1

ENVIRONMENTAL WALL COVERING



W311-2



W311-3



W311-4



W311-5



W311-6



W311-7



W311-8



W311-9




W311-10



W311-11



W311-12

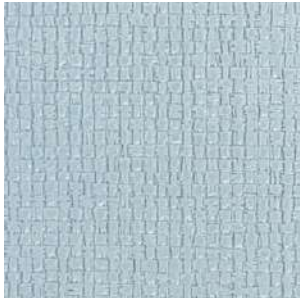

W311-13



WALL INDEX™ 52" / 54" VINYL WALLCOVERINGS

ARLIX

WALL INDEX™ VINYL WALL COVERINGS

ARLIX

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137 cm)
Total Weight	: 15.0 oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium, Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:


Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA

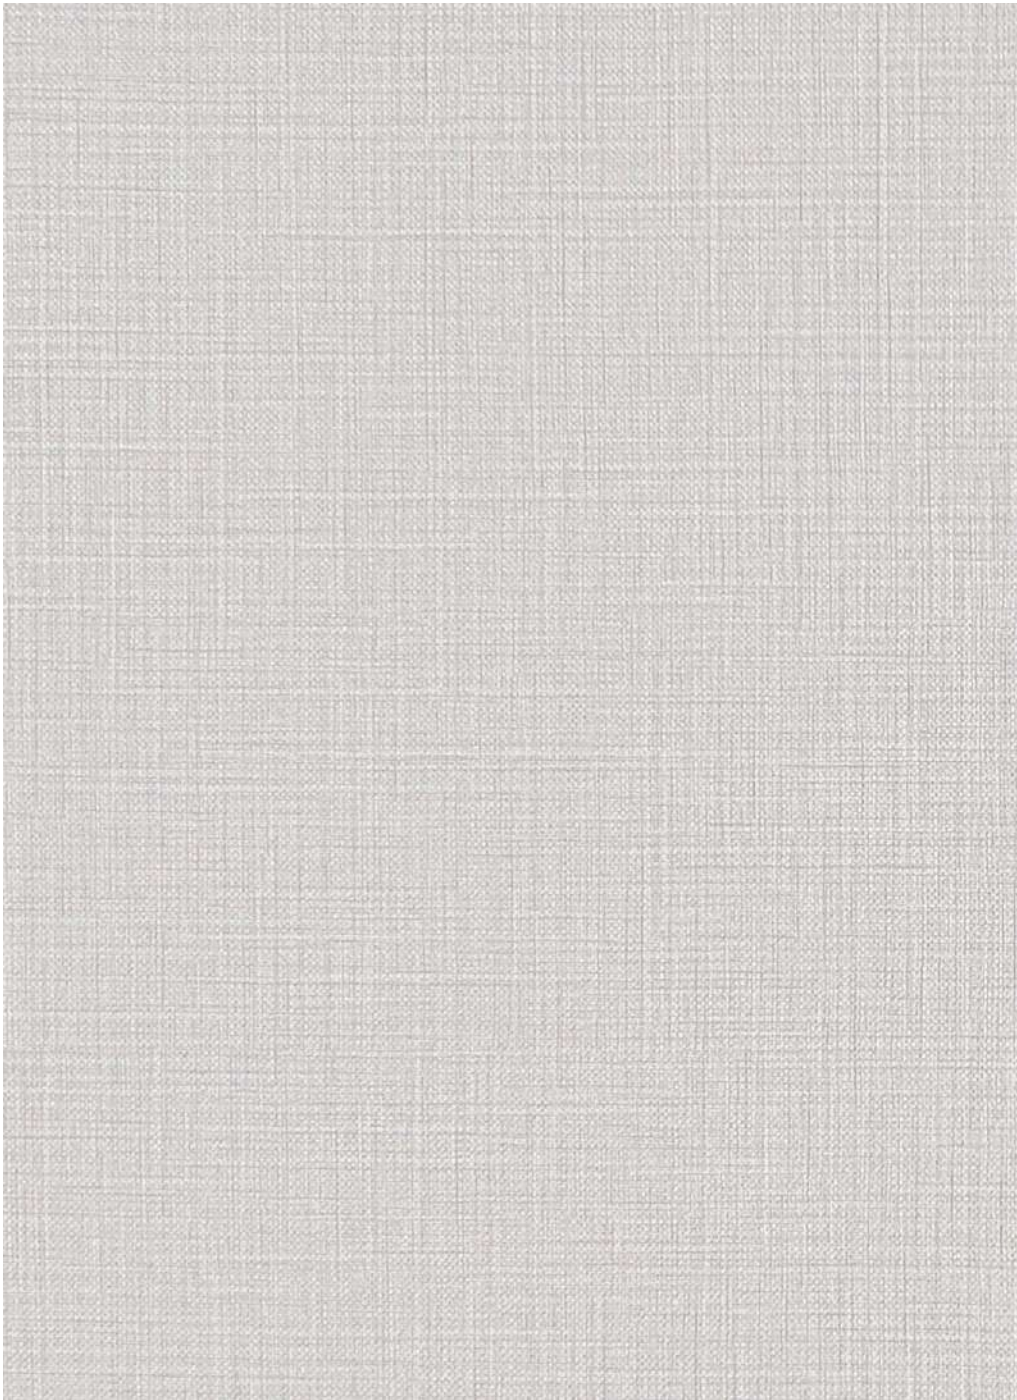

W312-1



W312-2



W312-3



W312-4



W312-5



W312-6



W312-7



W312-8



W312-9



W312-10




W312-11



W312-12



W312-13

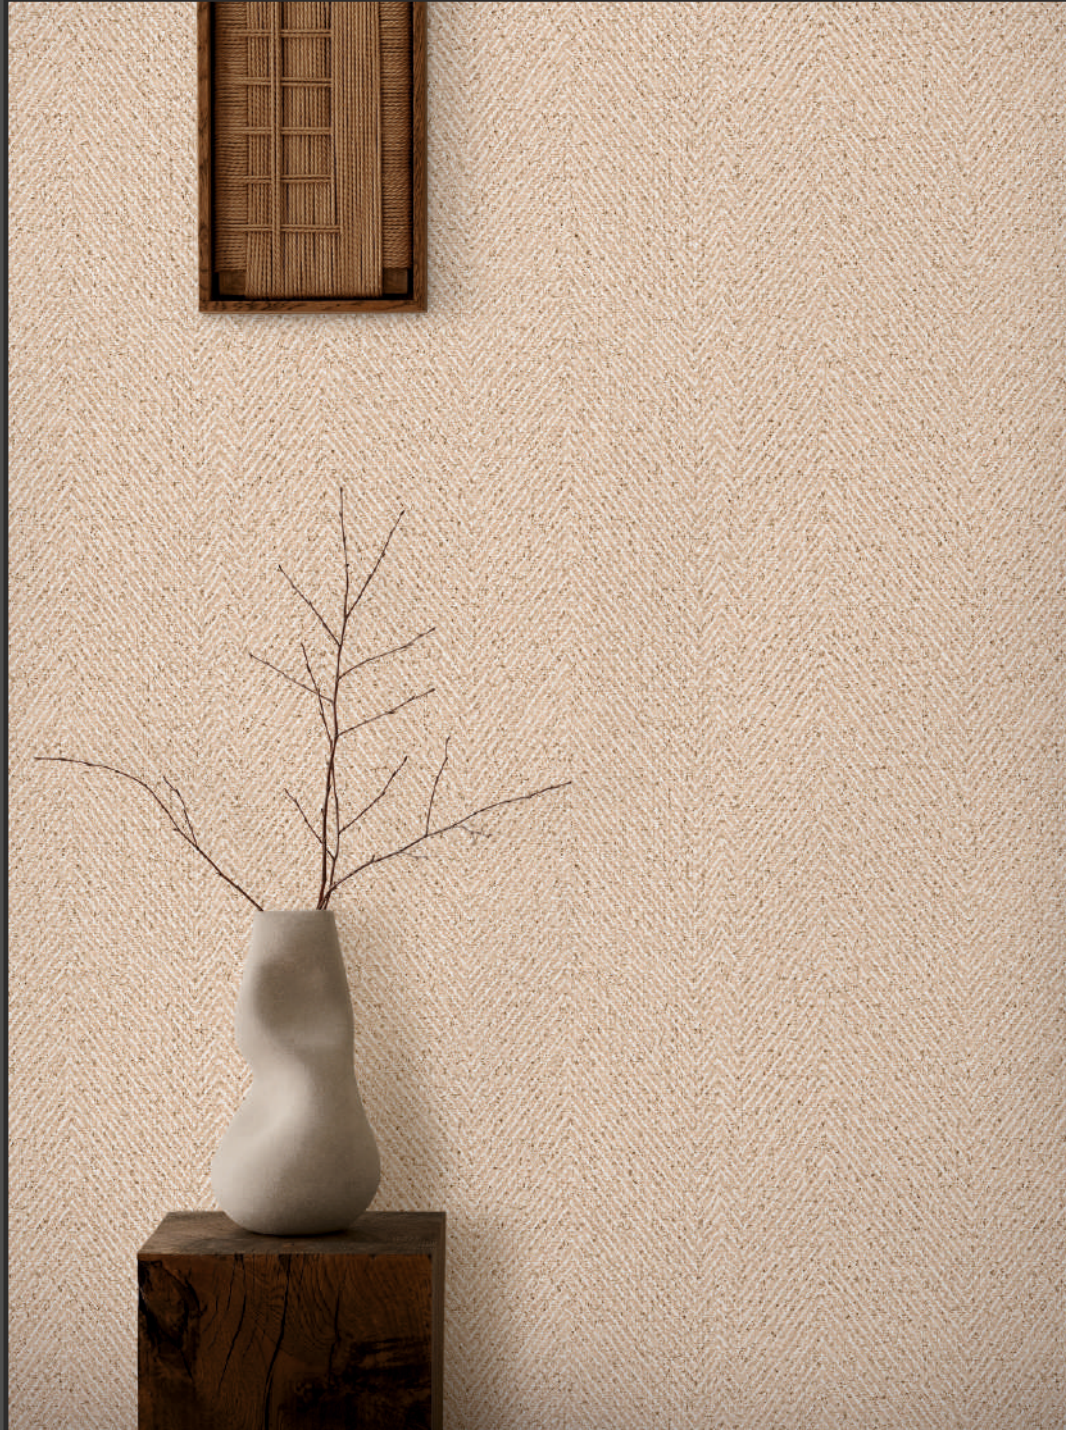

WALL INDEX™

52" / 54" VINYL WALLCOVERINGS

HEZIN

WALL INDEX™ VINYL WALL COVERINGS

HEZIN

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 20.0 oz./lin.yard - 615 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:


Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA

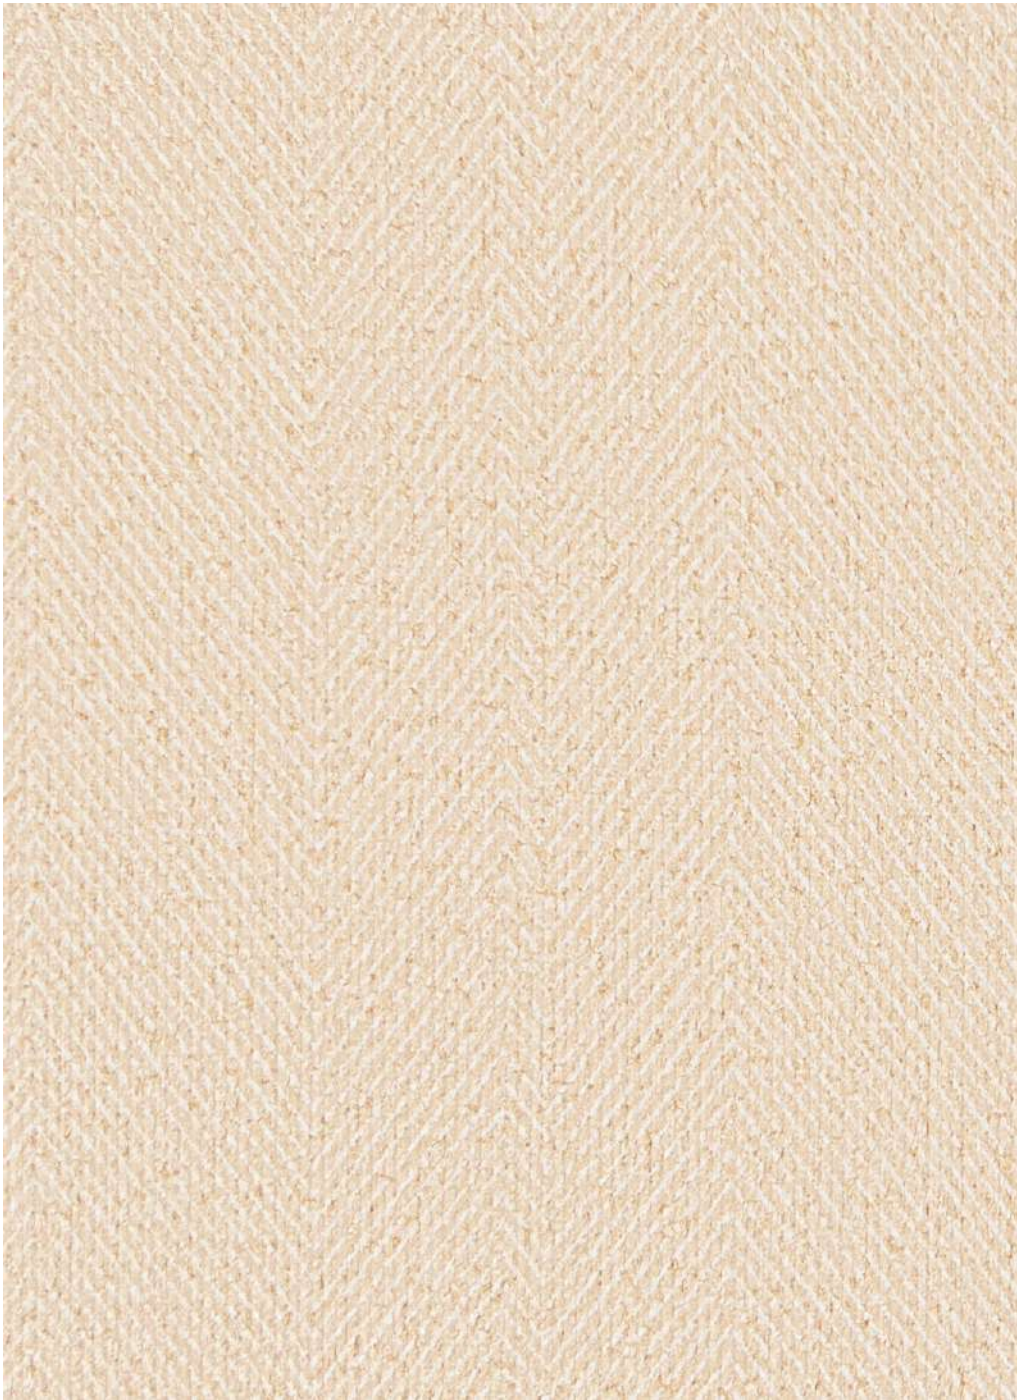

W313-1



W313-2



W313-3



W313-4



W313-5



W313-6



W313-7



W313-8



W313-9



W313-10



W313-11



W313-12



FEBKA



WALL INDEX™
52" / 54" VINYL WALLCOVERINGS

FEBKA

WALL INDEX™ VINYL WALL COVERINGS

FEBKA

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA



W314-1



W314-2



W314-3



W314-4



W314-5



W314-6



W314-7



W314-8



W314-9



W314-10



W314-11



W314-12



W314-13



LAMAS



WALL INDEXTM 52" / 54" VINYL WALLCOVERINGS

LAMAS

WALL INDEXTM VINYL WALL COVERINGS

LAMAS

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:


Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA

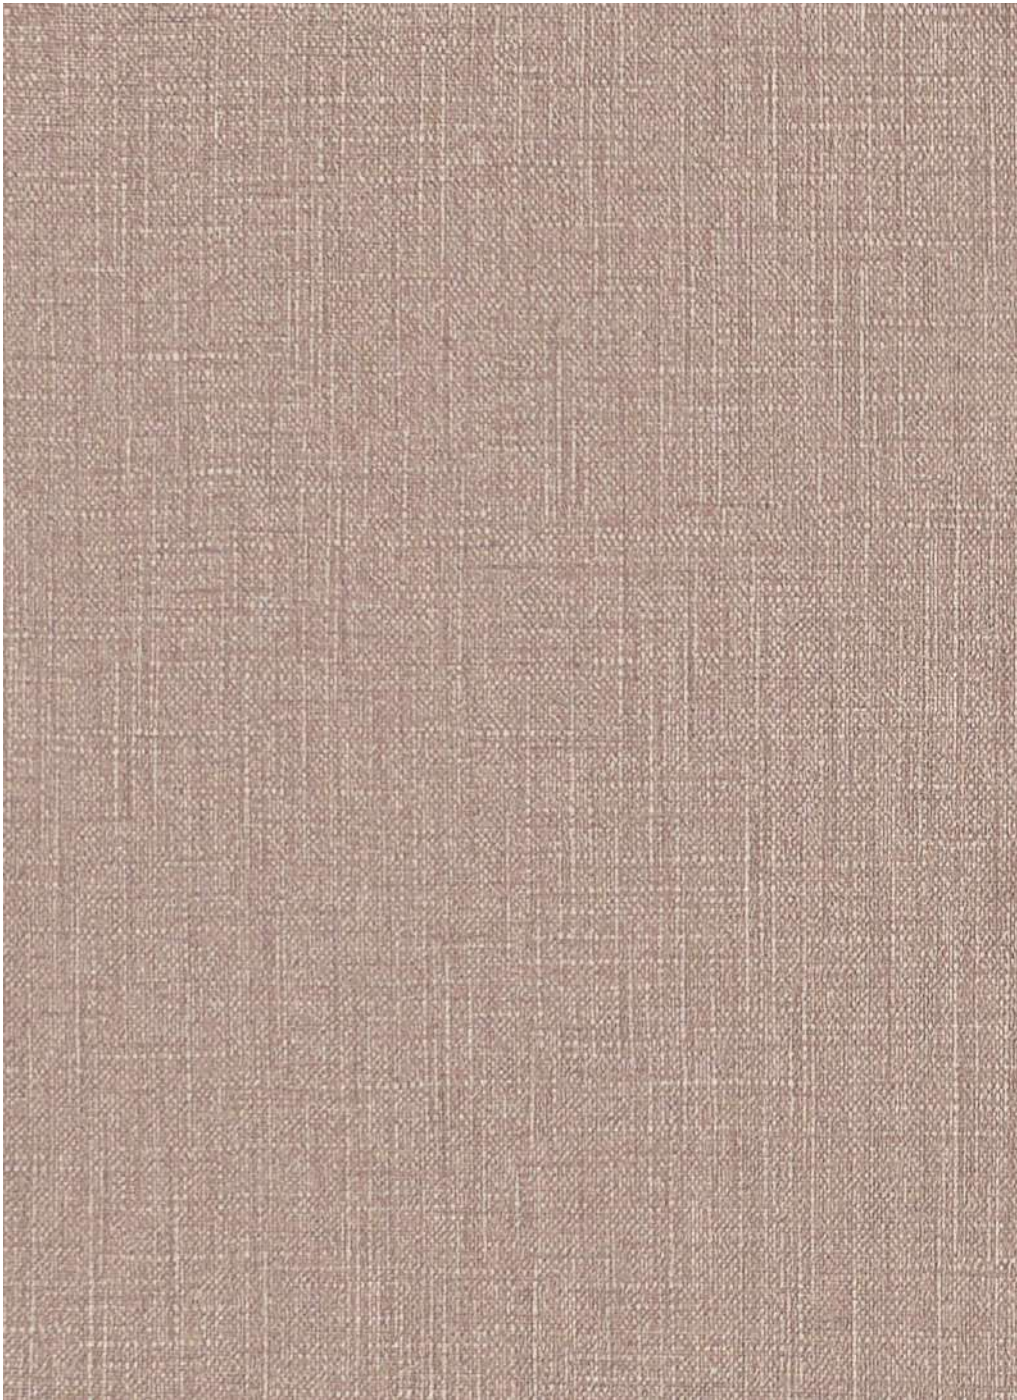

W315-1



W315-2



W315-3



W315-4



W315-5



W315-6



W315-7



W315-8



W315-9



W315-10



W315-11



W315-12



HARMAN



WALL INDEX™ 52" / 54" VINYL WALLCOVERINGS

HARMAN

WALL INDEX™ VINYL WALL COVERINGS

HARMAN

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA



W316-1



W316-2



W316-3



W316-4



W316-5



W316-6



W316-7



W316-8



W316-9



W316-10



W316-11



W316-12



WALL INDEX™ VINYL WALL COVERINGS

KINZO

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:


Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA

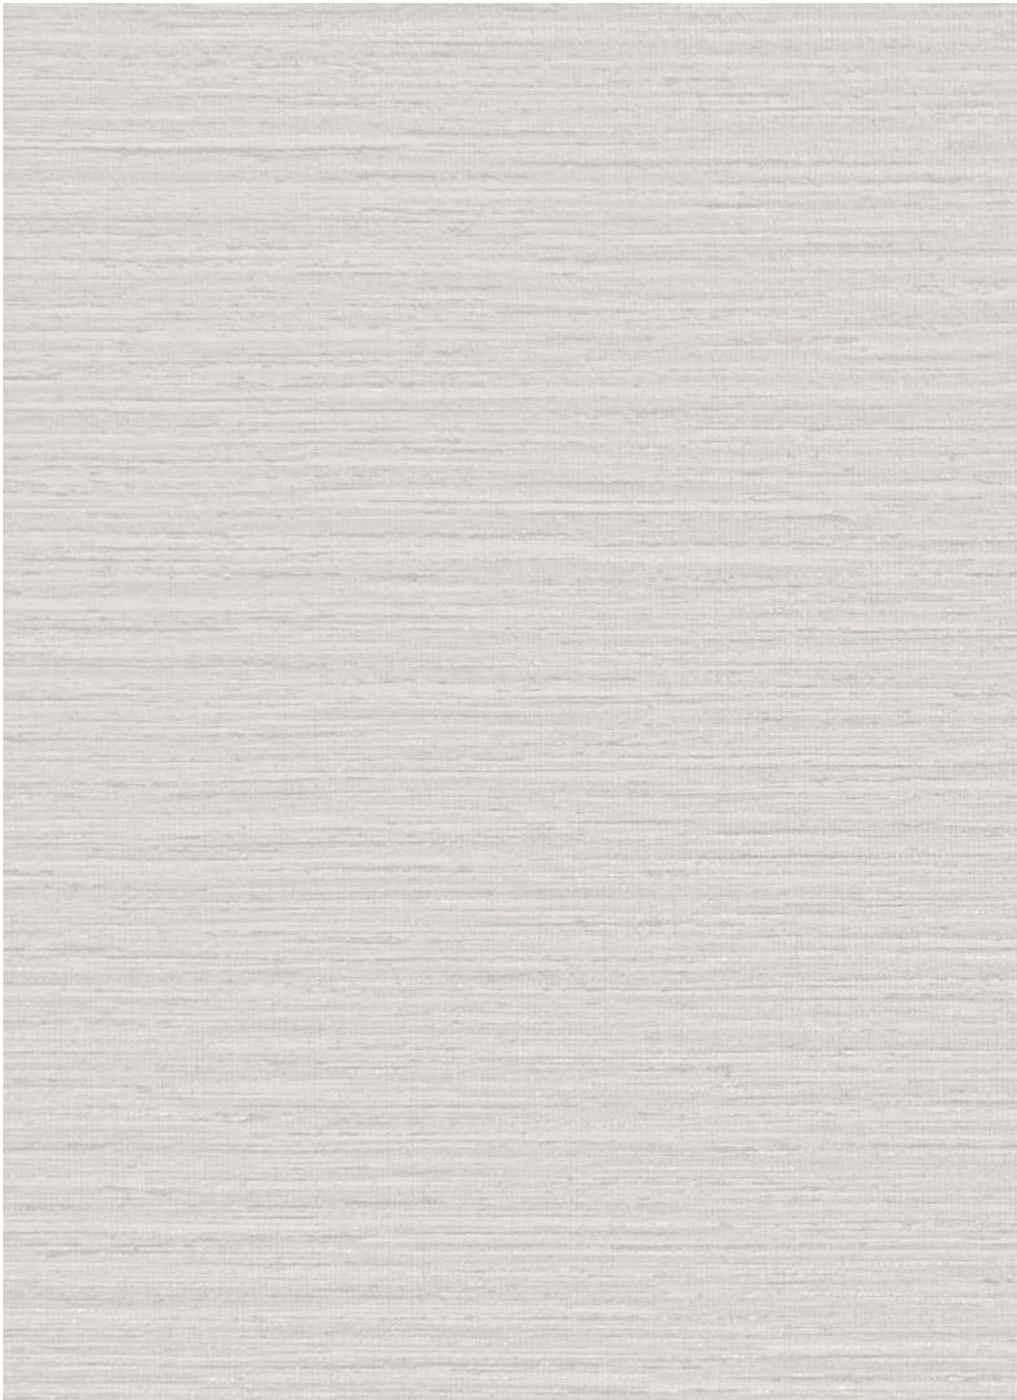

W317-1



W317-2



W317-3



W317-4



W317-5



W317-6



W317-7



W317-8



W317-9



W317-10



W317-11



W317-12



VERZOA



WALL INDEX™ 52" / 54" VINYL WALLCOVERINGS

VERZOA

WALL INDEX™ VINYL WALL COVERINGS

VERZOA

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137 cm)
Total Weight	: 15.0 oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.




Designed in USA



W318-1

ENVIRONMENTAL WALL COVERING

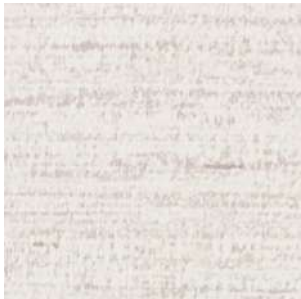

W318-2



W318-3



W318-4



W318-5



W318-6



W318-7



W318-8



W318-9



W318-10



W318-11



W318-12



W318-13



FREBER



WALL INDEX™ 52" / 54" VINYL WALLCOVERINGS

FREBER

WALL INDEX™ VINYL WALL COVERINGS

FREBER

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 20.0.oz./lin.yard - 615 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:


Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.




Designed in USA

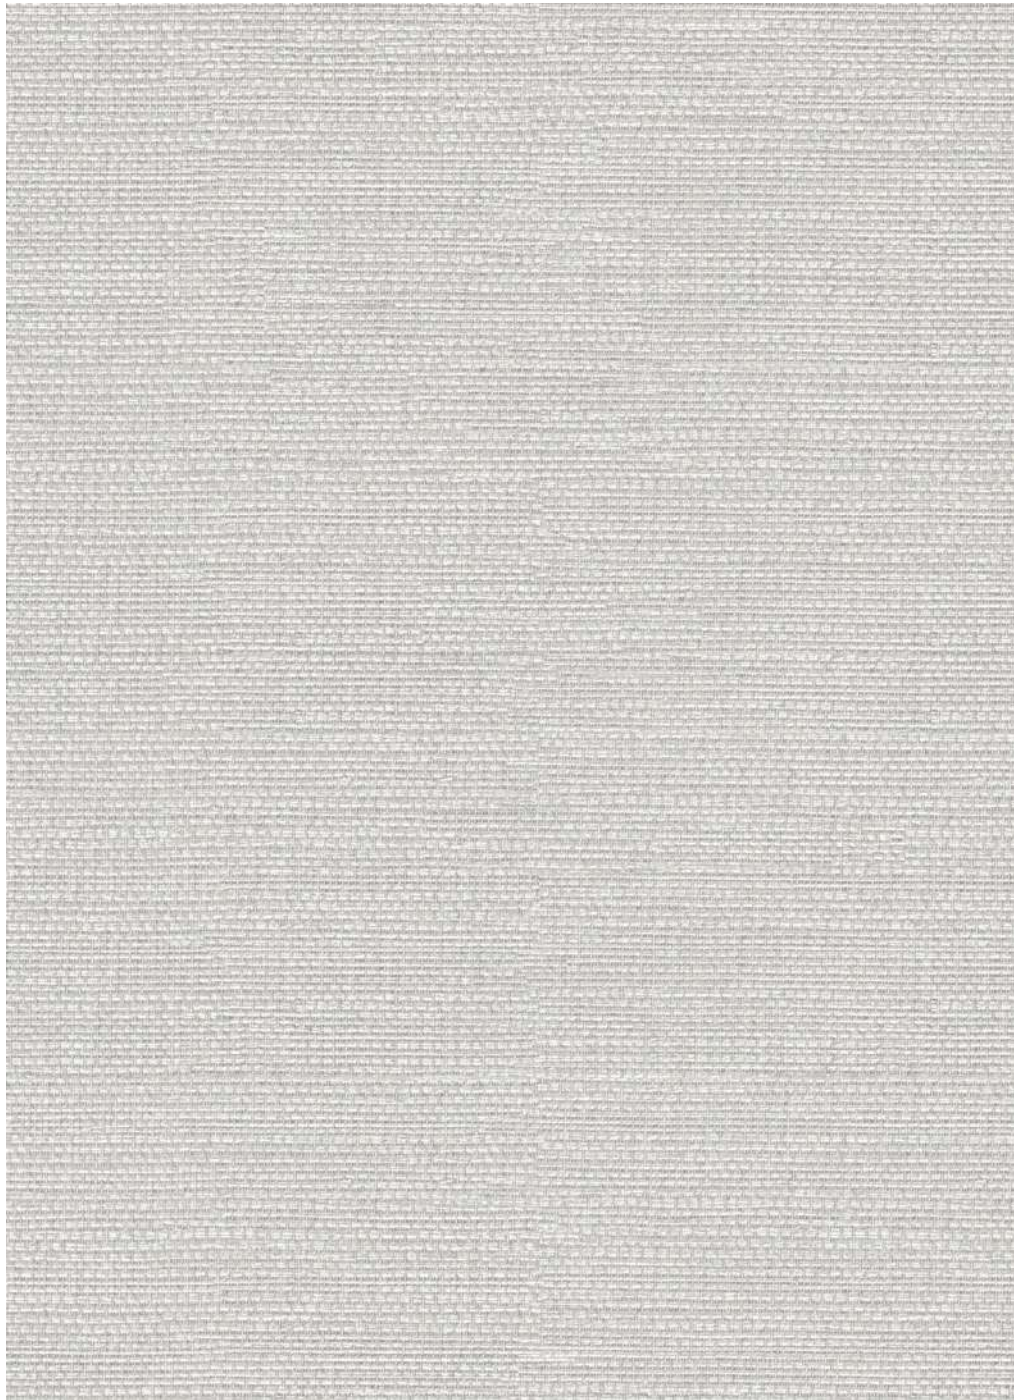

W319-1



W319-2

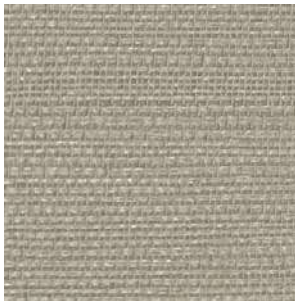

W319-5



W319-8




W319-11



W319-3



W319-6

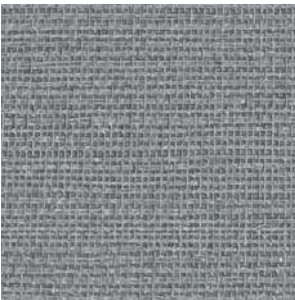

W319-9



W319-12



W319-4



W319-7



W319-10



W319-13



WALL INDEX™ 52" / 54" VINYL WALLCOVERINGS

ROBEL

WALL INDEX™ VINYL WALL COVERINGS

ROBEL

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 35.0.oz./lin.yard -1050 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 30 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:


Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA

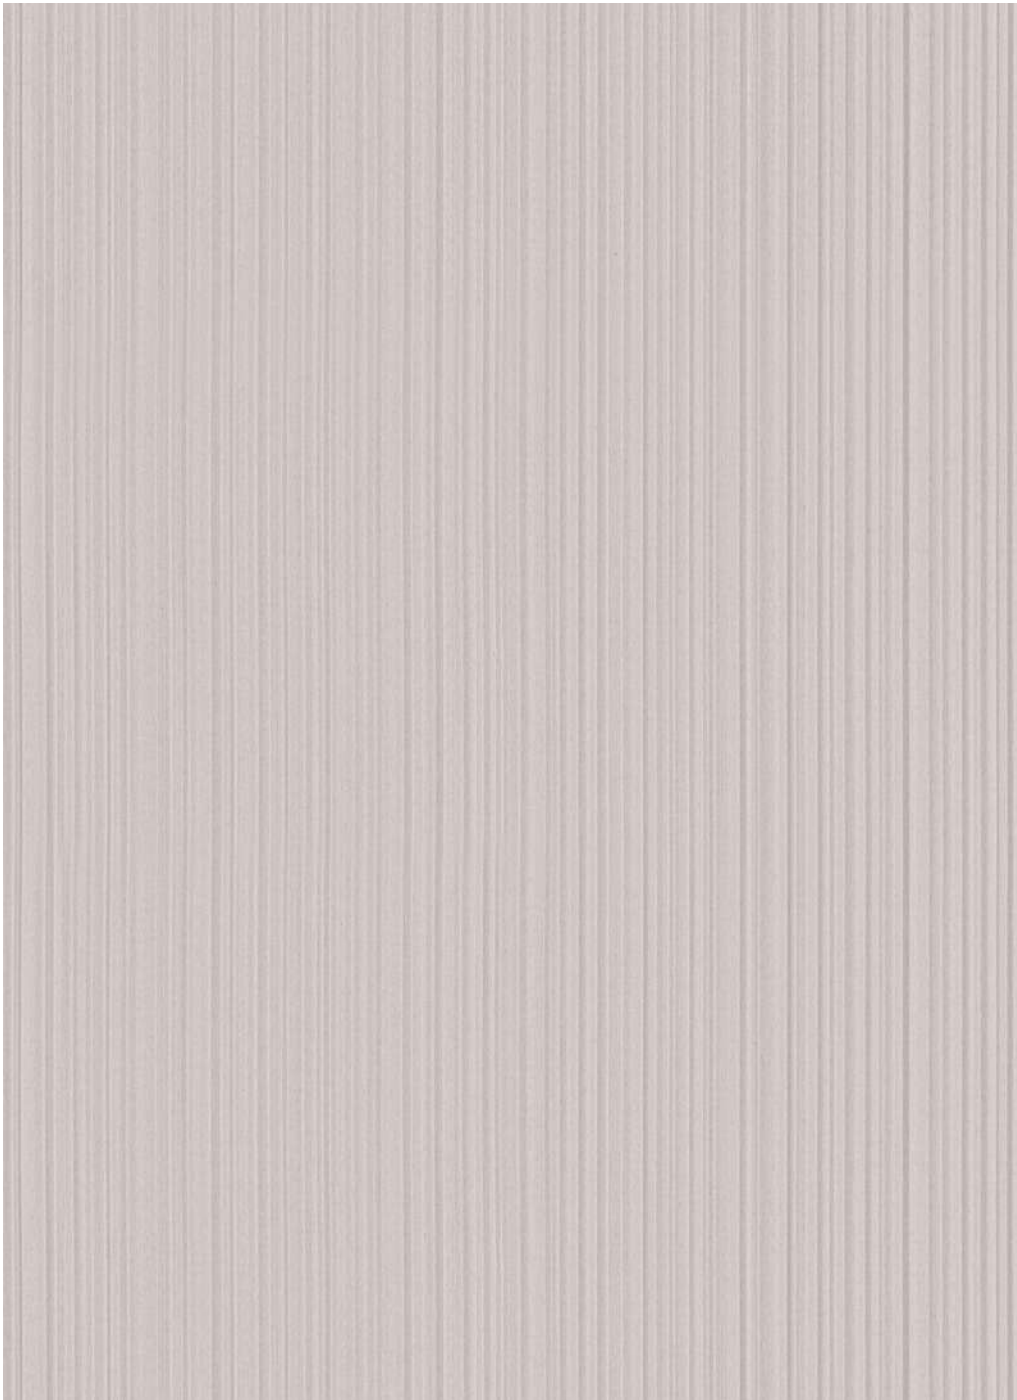

W320-1



W320-2



W320-3



W320-4



W320-5



W320-6



W320-7



W320-8



W320-9



W320-10




W320-11



W320-12



W320-13

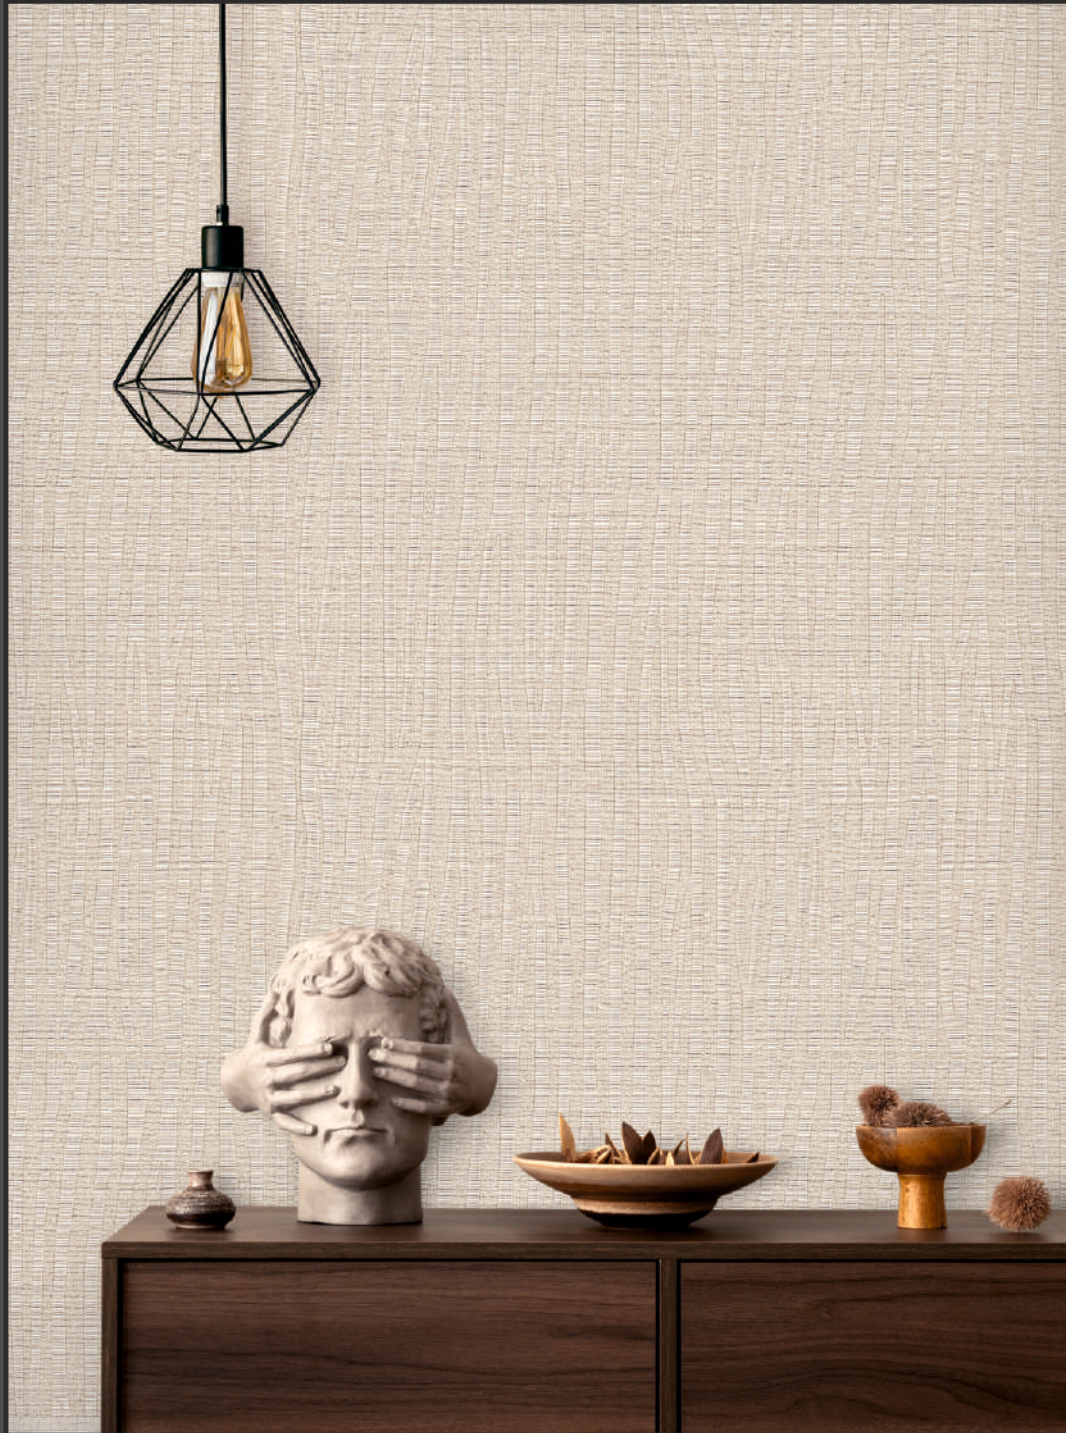

WALL INDEX™ VINYL WALL COVERINGS

NOMAR

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 20.0.oz./lin.yard - 615 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.





W321-1



W321-2



W321-3




W321-4




W321-5



W321-6

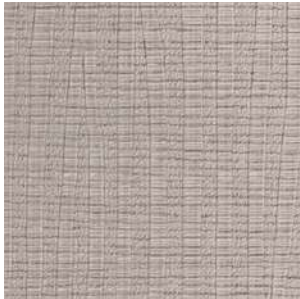

W321-7

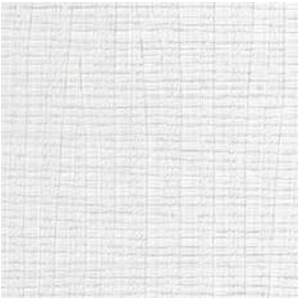


W321-8



W321-9



W321-10

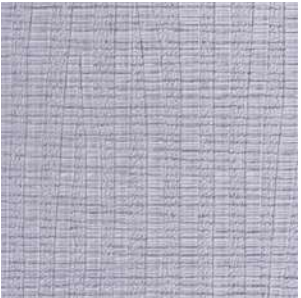

W321-11



W321-12



W321-13



LENON



ORECA



WALL INDEX™ 52" / 54" VINYL WALLCOVERINGS

LENON/ORECA

WALL INDEX™ VINYL WALL COVERINGS

LENON/ORECA

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA



W322-1



W322-2



W322-3



W322-4



W322-5



W322-6



W322-7



W323-1



W323-2



W323-3



W323-4



W323-5



W323-6



W323-7



EROX



WALL INDEX™
52" / 54" VINYL WALLCOVERINGS

MINO



EROX/MINO

WALL INDEX™ VINYL WALL COVERINGS

EROX/MINO

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:


Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA

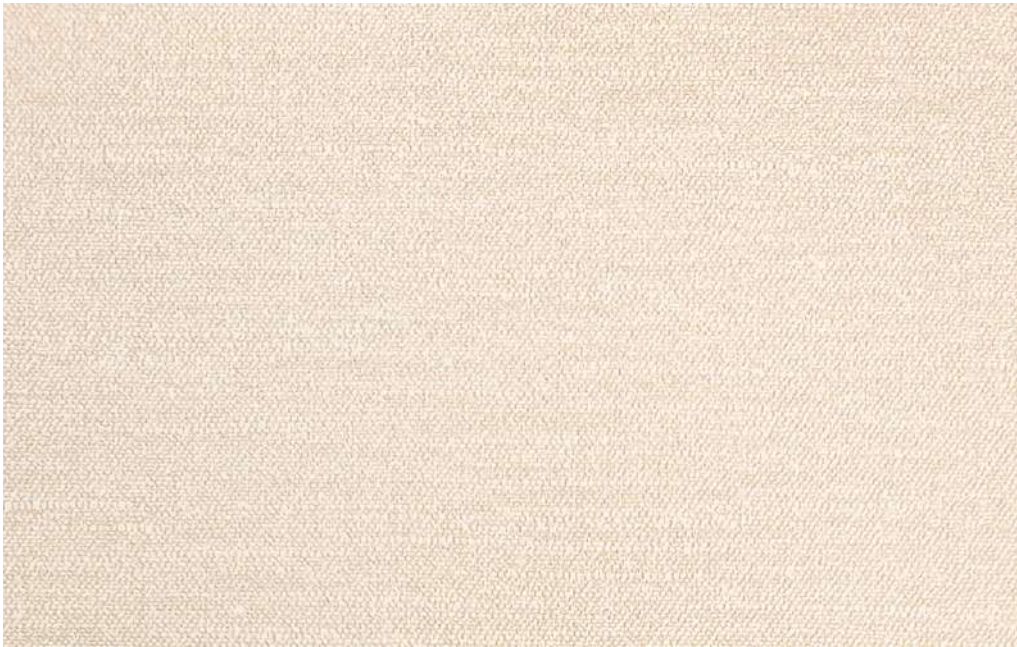


W324-1



W324-2



W324-3

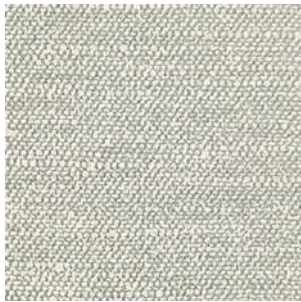

W324-4



W324-5



W324-6



W324-7



W325-1




W325-2



W325-3



W325-4

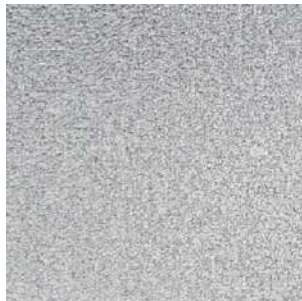

W325-5



W325-6



W325-7



WALL INDEX™ 52" / 54" VINYL WALLCOVERINGS

SILA



REVIN/SILA

WALL INDEX™ VINYL WALL COVERINGS

REVIN/SILA

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated

Fabric Backed Wallcovering

Width : 52"/54" (132 cm/137 cm)

Total Weight : 15.0 oz./lin.yard - 466 gr/lin-meter

Backing : Woven Cotton Backing

Fire Rated : Class - "A" Tested In Accordance
ASTM E-84 Tunnel Test

Tensile Breaking Strength : 80X75 Pounds

Flame Spread : 20

Smoke Developed : 25

Pattern Match : Random Match

Packaging : 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:


Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA

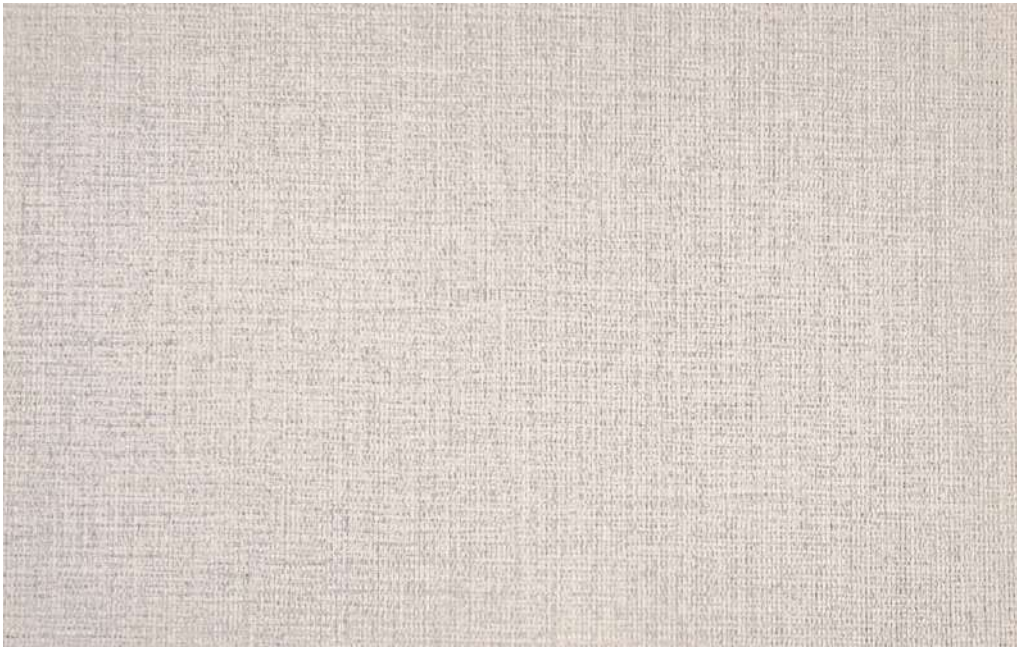

W326-1



W326-2



W326-3



W326-4



W326-5



W326-6



W327-1



W327-2



W327-3



W327-4



W327-5



W327-6



W327-7



WALL INDEX™ 52" / 54" VINYL WALLCOVERINGS



WALL INDEX™ VINYL WALL COVERINGS

KEVIN/ELEK

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.


Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



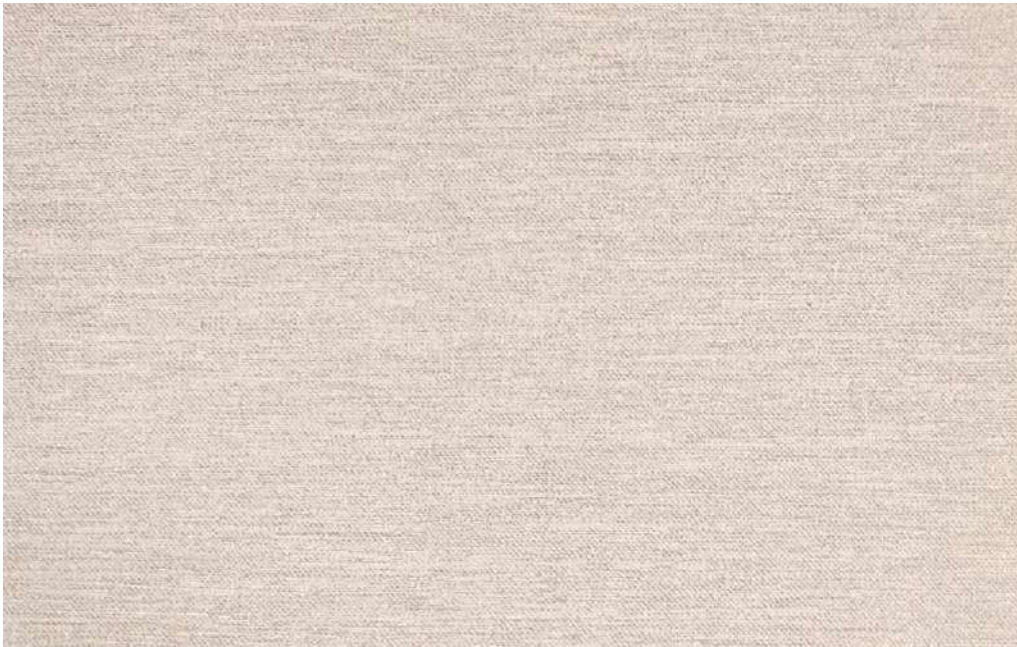

W328-1



W328-2



W328-3



W328-4



W328-5



W328-6



W328-7



W329-1



W329-2




W329-3



W329-4



W329-5

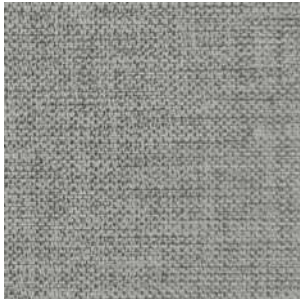

W329-6



W329-7



JECOB



FRECY



WALL INDEX™
52\"/>

JECOB/FRECY

WALL INDEX™ VINYL WALL COVERINGS

JECOB/FRECY

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52\"/>
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:


Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA

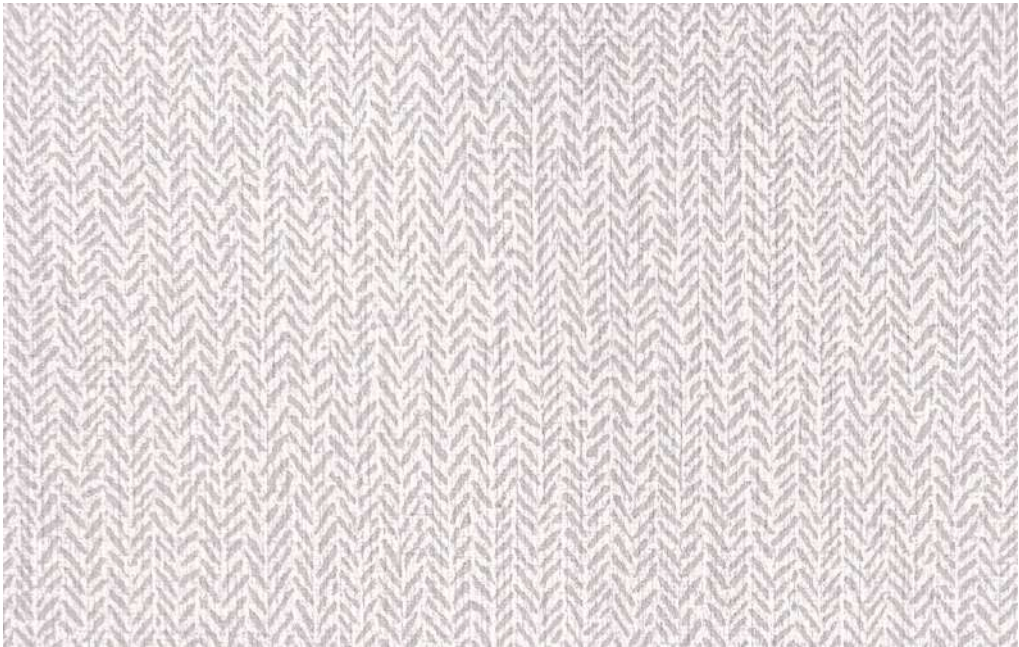

W330-1



W330-2



W330-3



W330-4



W330-5



W330-6



W330-7




W331-1



W331-2



W331-3

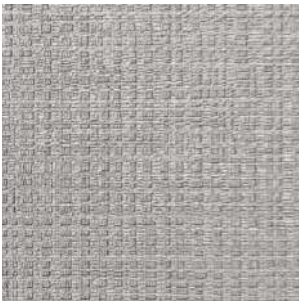

W331-4




W331-5



W331-6



AKRIN

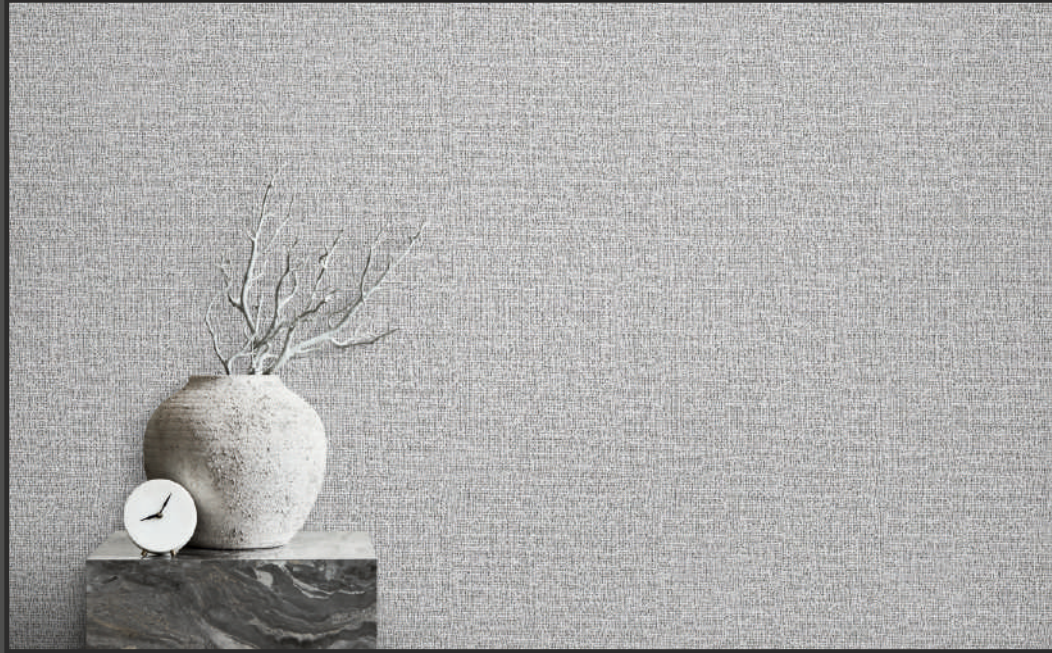

VERON



WALL INDEX™ 52" / 54" VINYL WALLCOVERINGS

AKRIN/VERON

WALL INDEX™ VINYL WALL COVERINGS

AKRIN/VERON

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137 cm)
Total Weight	: 15.0 oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :

Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA



W332-1



W332-2



W332-3



W332-4




W332-5




W332-6



W332-7

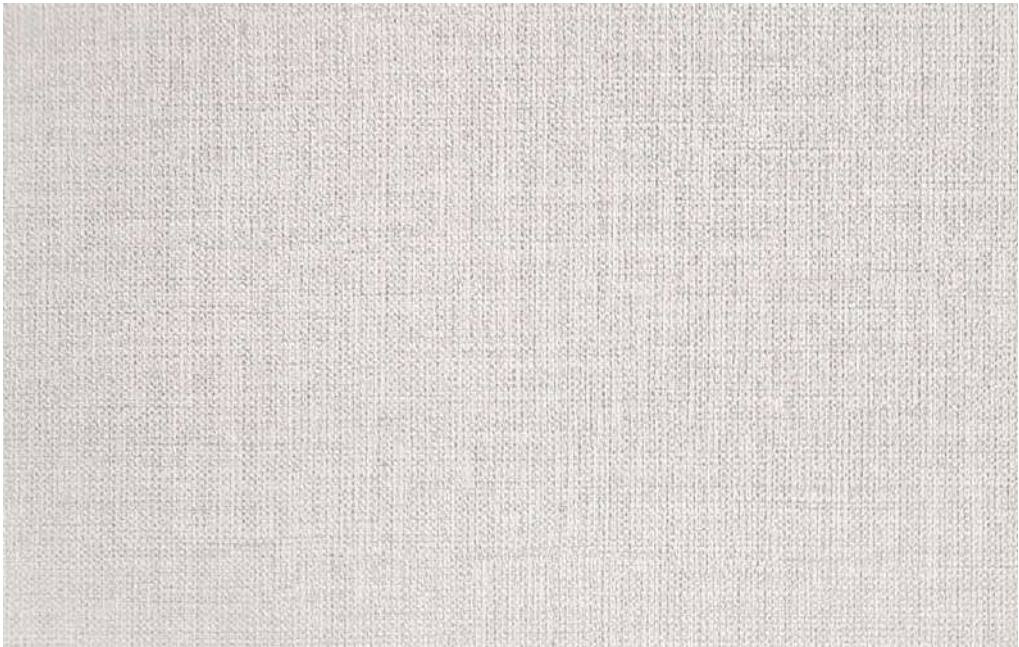

W333-1

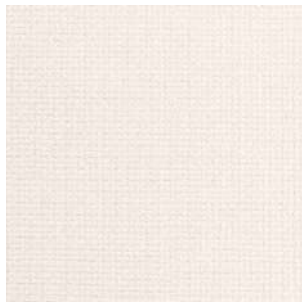

W333-2



W333-3



W333-4



W333-5



W333-6



W333-7



BOLTEN



VEXTA



WALL INDEX™ 52" / 54" VINYL WALLCOVERINGS

BOLTEN/VEXTA

WALL INDEX™ VINYL WALL COVERINGS

BOLTEN/VEXTA

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 35.0.oz./lin.yard (BOLTEN) 20.0.oz./lin.yard (VEXTA)
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 30/50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :


Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.



Designed in USA



W334-1

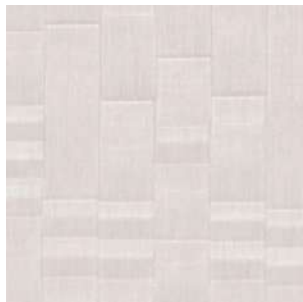

W334-2



W334-3



W334-4



W334-5




W334-6



W334-7



W335-1

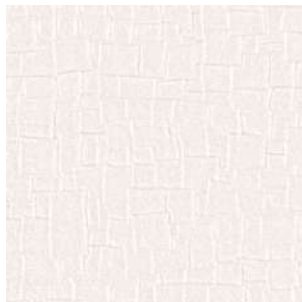

W335-2



W335-3



W335-4



W335-5



W335-6



W335-7



WALL INDEX™ VINYL WALL COVERINGS

Product Specifications

Type II, Medium Weight, Class A, Vinyl Coated	
Fabric Backed Wallcovering	
Width	: 52"/54" (132 cm/137cm)
Total Weight	: 15.0.oz./lin.yard - 466 gr/lin-meter
Backing	: Woven Cotton Backing
Fire Rated	: Class - "A" Tested In Accordance ASTM E-84 Tunnel Test
Tensile Breaking Strength	: 80X75 Pounds
Flame Spread	: 20
Smoke Developed	: 25
Pattern Match	: Random Match
Packaging	: 50 Meter Bolts



US Classification : ASTM-E84 Class - A

CHN Classification : GB8624-2012: Class B

EU Classification : EN 15102 : 2007+A1 : 2011



Anti Microbial Features:

Water based environmentally friendly inks, free of Cadmium. Mercury and Ozone depleting chemicals.

Wall Surface Preparations:

The wall surface must be clean, smooth, stable, even and all in one colour before hanging wallpaper. The wall should be dry enough with a maximum of 8% water absorption. If the other side of the wall is in a bathroom, the surface of the wall must be water proof. If the wall is wet of mouldy, the mould needs to be eliminated completely by brushing fungicide on it which will also make it moisture proof.

Adhesive Applying:

Apply adhesive evenly to the back of the wallpaper, fold and leave it for 5-10 minutes, and let the cloth absorb the adhesive completely. For heavy wallpaper, you can also brush adhesive directly to the wall and wait 5-10 minutes before hanging.

Hanging :


Start to hang from a corner and use a plumb line to ensure the wallpaper is straight and not leaning to one side, if the corner you started from is not straight, use a wiper board to smooth the wallpaper evenly and gently to remove any bubbles. For heavier wallpaper, use a strong glue for the seams. When applying the second strip, it should be applied to edge of the previous one and make sure the design is matched. For plain wallpapers there is no need to match. Overlap the two strips and use a sharp knife to cut in the middle. To make the cutting line straight, use a steel ruler.





W336-1

ENVIRONMENTAL WALL COVERING

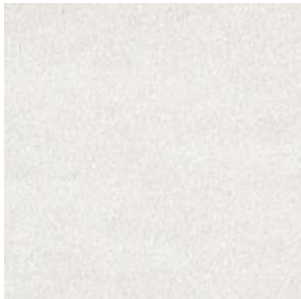

W336-2



W336-3



W336-4



W336-5



W336-6



W336-7



W336-8



W336-9



W336-10




W336-11



W336-12



W336-13

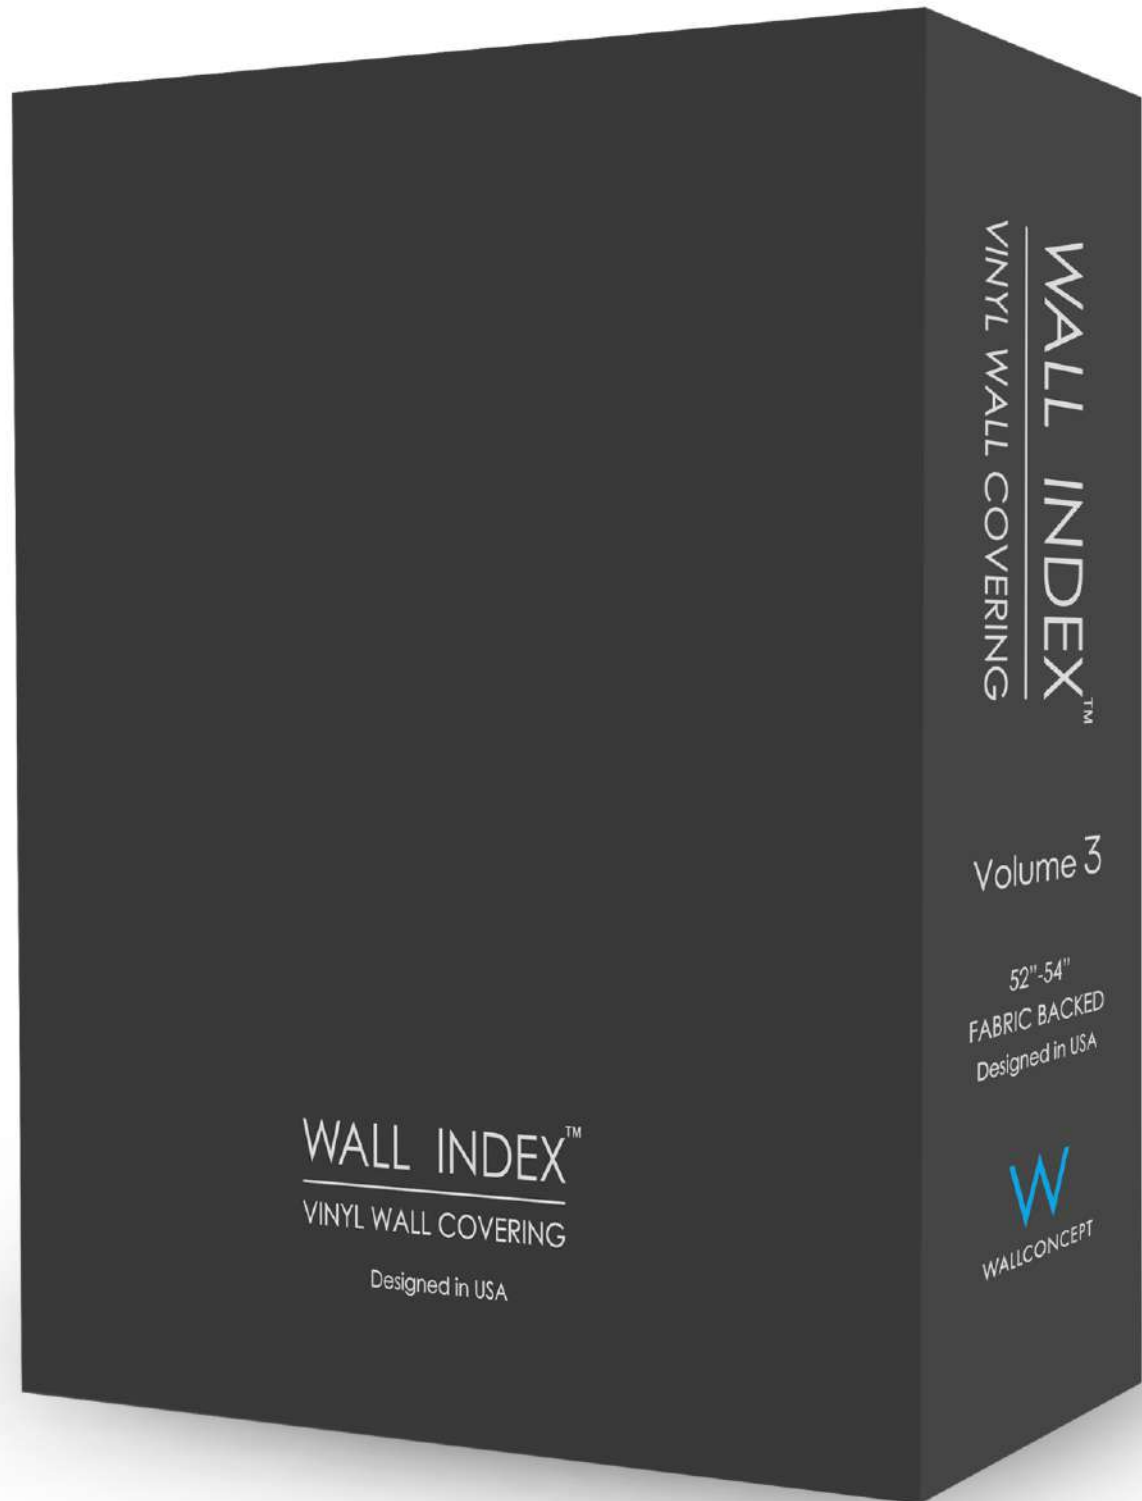

WALLCONCEPT

📍 Office-B-216, Second Floor, Okhla Industrial Area
Phase 1, New Delhi - 110020, India.

☎ Phone : 011-41616326, 9810556326

💬 For Order Query : 7303600801

✉ E-mail : wallconceptdelhi@gmail.com

🌐 Website : www.wallconcept.in